

GEOTAB RULESET SWITCHER


To check your current Ruleset in Geotab:

- Open Geotab App
- Go to Hours of Service Section
- Click Status Tab

If you pull up your hours of service and notice that you are in the wrong ruleset, please click on the dashboard tab at the bottom of the screen:


ProTips:

- Remember that you should only be using a “With Split Sleeper” enabled ruleset during the time that you are actively running splits.
 - If you have this ruleset enabled when you are not planning to use Split Sleeper, it may cause your available HOS to be miscalculated, and could lead to unnecessary down time, or citations and violations.

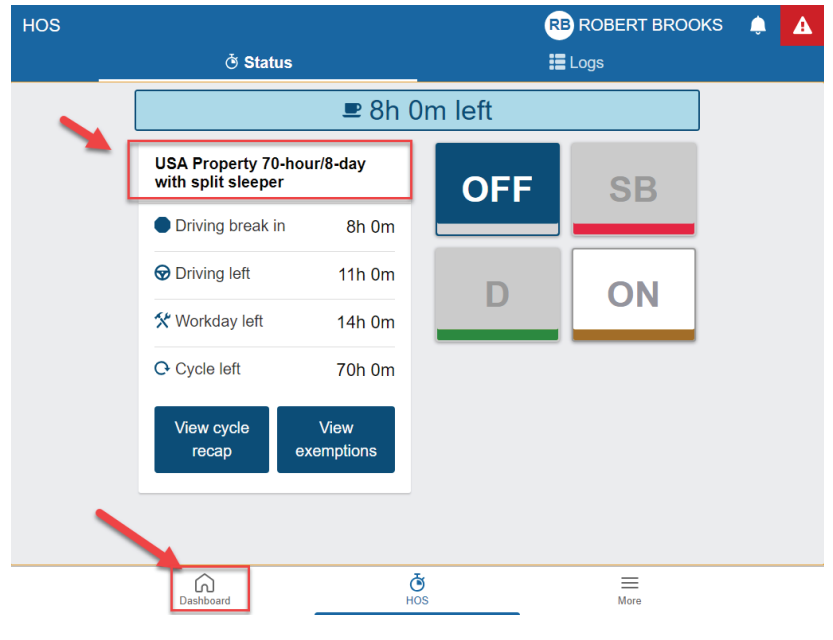


To change your current Ruleset:


Click **Ruleset Switcher** from the Dashboard menu:

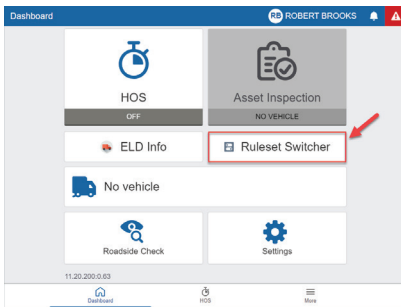


To change your ruleset to another available option, click the **Switch Ruleset** button:

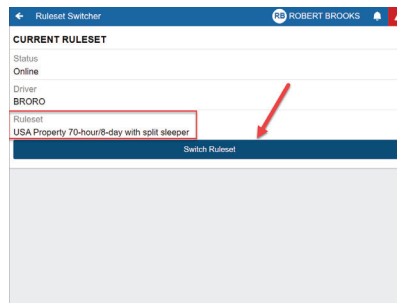


Select the proper ruleset, and then click **Save**:
(If you operate in a Day cab; you should never select a “Split Sleeper” enabled option)

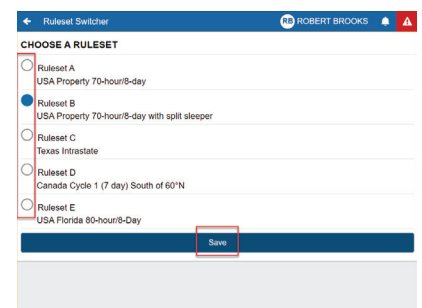

Make sure it shows the correct Ruleset then click the **back arrow** in the top left corner:

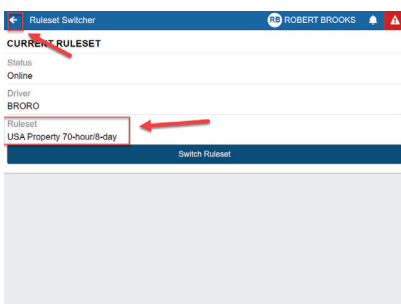

Now you'll need to refresh the app; Click on the **more tab** on the bottom right, and select **Check for updates**:

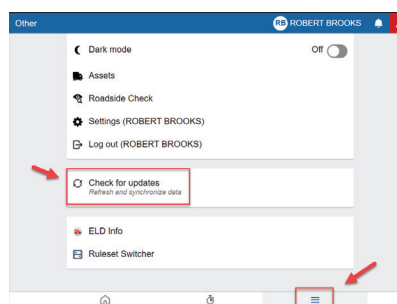

Once updated, go to HOS screen and confirm your status tab shows the correct ruleset.

